

Mini-Lever CAP Assembly 2272889

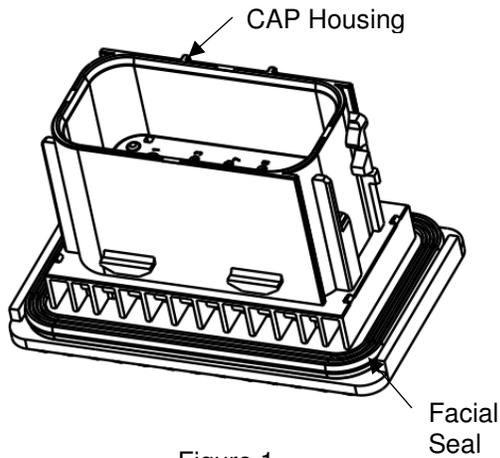


Figure 1

To return the seal to its proper position, grasp the seal as shown in Figure 3.



Figure 3

1. INTRODUCTION

This instruction sheet covers the assembly of the facial seal should it come dislodged during shipment of the CAP assembly

2. DESCRIPTION

The CAP assembly consists of the CAP housing, wire seal, terminal block, TPA and facial seal. See Figure 1.

The facial seal can become dislodged during shipment but can be returned to the correct position

3. ASSEMBLY PROCEDURE

During shipping, the facial seal may become dislodged as shown in Figure 2.



Figure 2

Rotate the flange so it will slide back under the lip on the CAP Housing, see Figure 4 and Figure 5



Figure 4



Figure 5

4. **REPLACEMENT AND REPAIR**
The facial seal is not repairable and should be replaced if damaged.

5. **REVISION SUMMARY**
Initial release