

OPERATING INSTRUCTIONS

Variable Reluctance Speed Sensor with AmplGREEN LINE EV58AM30

Product ID				
	Type #	Product #	Drawing #	
	EV58AM30	385Z-05921	114780	
General				
Function	The EV58AM30 series variable reluctance (VR) speed sensors consist of an iron core, an inductive coil, a permanent magnet and an amplifier. A ferrous pole wheel passing the sensor face changes the magnetic field strength, resulting in an AC voltage being induced in the coil. This signal is converted to a square wave signal with constant amplitude by the integrated amplifier. The frequency of the output signal is proportional to the speed of the moving target.			
Technical data				
Supply voltage	5 32 VDC, protected against reverse polarity			
Current consumption	Max. 5 mA (without I	oad)		
Coil properties	Inductance @ 1 kHz: 170 mH \pm 10% Resistance: 850 Ohm \pm 10% Magnet polarity: north pole towards front face Pole piece: diameter 2.7 mm			
Polarity	Upon approach of ferrous metal, the signal pin is positive with respect to GND.			
Signal output	Square wave signal from NPN output transistor with internal 2.2 k Ω pull-up resistor, DC-coupled to supply (negative pole = reference voltage). The signal frequency is proportional to the target speed. The signal amplitude does not depend on air gap and target geometry.			
Frequency range	Up to 20 kHz, lower limit depending on application			
Housing	5/8"-18 UNF-2A, tightening torque: max. 35 Nm			
Connection	Connector mates with straight plug MS3106A-10SL-3S, 3 pins			
Protection	Sensor head: IP68 Connector: IP67			
Insulation	Housing and electronics galvanically isolated (Test: 500 V, 50 Hz for 1 minute)			
Pole wheel	Prerequisite: Toothe Optimal performanc Involute gear Tooth width > 10 Side offset < 0.2 Eccentricity < 0.2	d wheel of a ferrous materia e with) mm ? mm mm	al (e.g. Steel 1.0036).	
Air gap between sensor and pole wheel	Depending on lowes in the order of 1mm.	t circumferential speed whi	ch has to be detected. Typically	
Operating temperature	-40°C…125°C			

Last change by:	Checked by:	Document status:	Document Nr.:	Document Revision:
TH, 26.07.2016	WH, 29.08.2016	APPROVED	117816	001
www.jaquet.com info@jaqu		et.com Te	el.: +41 61 306 88 2	22 Page 1/3



OPERATING INSTRUCTIONS

Safety	All mechanical installations must be carried out by an expert. General safety requirements have to be met.		
Installation	The sensor has to be aligned to the pole wheel according to the sensor drawing independent of its rotational orientation. Deviations in positioning may affect the performance and decrease the noise immunity of the sensor. During installation, the smallest possible pole wheel to sensor gap should be set. The gap should however be set to prevent the face of the sensor ever touching the pole wheel. The amplitude of the output signal is not influenced by the air gap. A sensor should be mounted with the middle of the face side over the middle of the pole wheel. Dependent upon the wheel width, a certain degree of axial movement is permissible. However, the middle of the sensor must be at minimum in a distance of 3 mm from the edge of the pole wheel under all operating conditions. A solid and vibration free mounting of the sensor is important. Eventual sensor vibration relative to the pole wheel can induce additional output pulses. The sensors are insensitive to oil, grease etc. and can be installed in arduous conditions.		
Maintenance	Product cannot be repaired.		
Transport	Product must be handled with care to prevent damage of the front face.		
Storage	Product must be stored in dry conditions. The storage temperature corresponds to the operation temperature.		
Disposal	Product must be disposed of properly, it must not be disposed as domestic waste.		

Last change by:	Checked by:	Document status:	Document Nr.:	Document Revision:
TH, 26.07.2016	WH, 29.08.2016	APPROVED	117816	001
www.jaquet.com info@jaque		et.com Te	el.: +41 61 306 88 2	22 Page 2/3



OPERATING INSTRUCTIONS



Last change by:	Checked by:	Document status:	Document Nr.:	Document Revi	sion:
TH, 26.07.2016	WH, 29.08.2016	APPROVED	117816	001	
www.jaquet.com info@jaque		quet.com	Tel.: +41 61 306 88	22	Page 3/3