



AMP INCORPORATED
HARRISBURG, PENNA.

A-MP* STRAIN RELIEF CLAMP
FOR 21 & 41 POSITION
SERIES "M" CONNECTORS

IS 7012

RELEASED 9-18-62

REVISED 5-15-64

CONNECTOR PRODUCTS
DIVISION

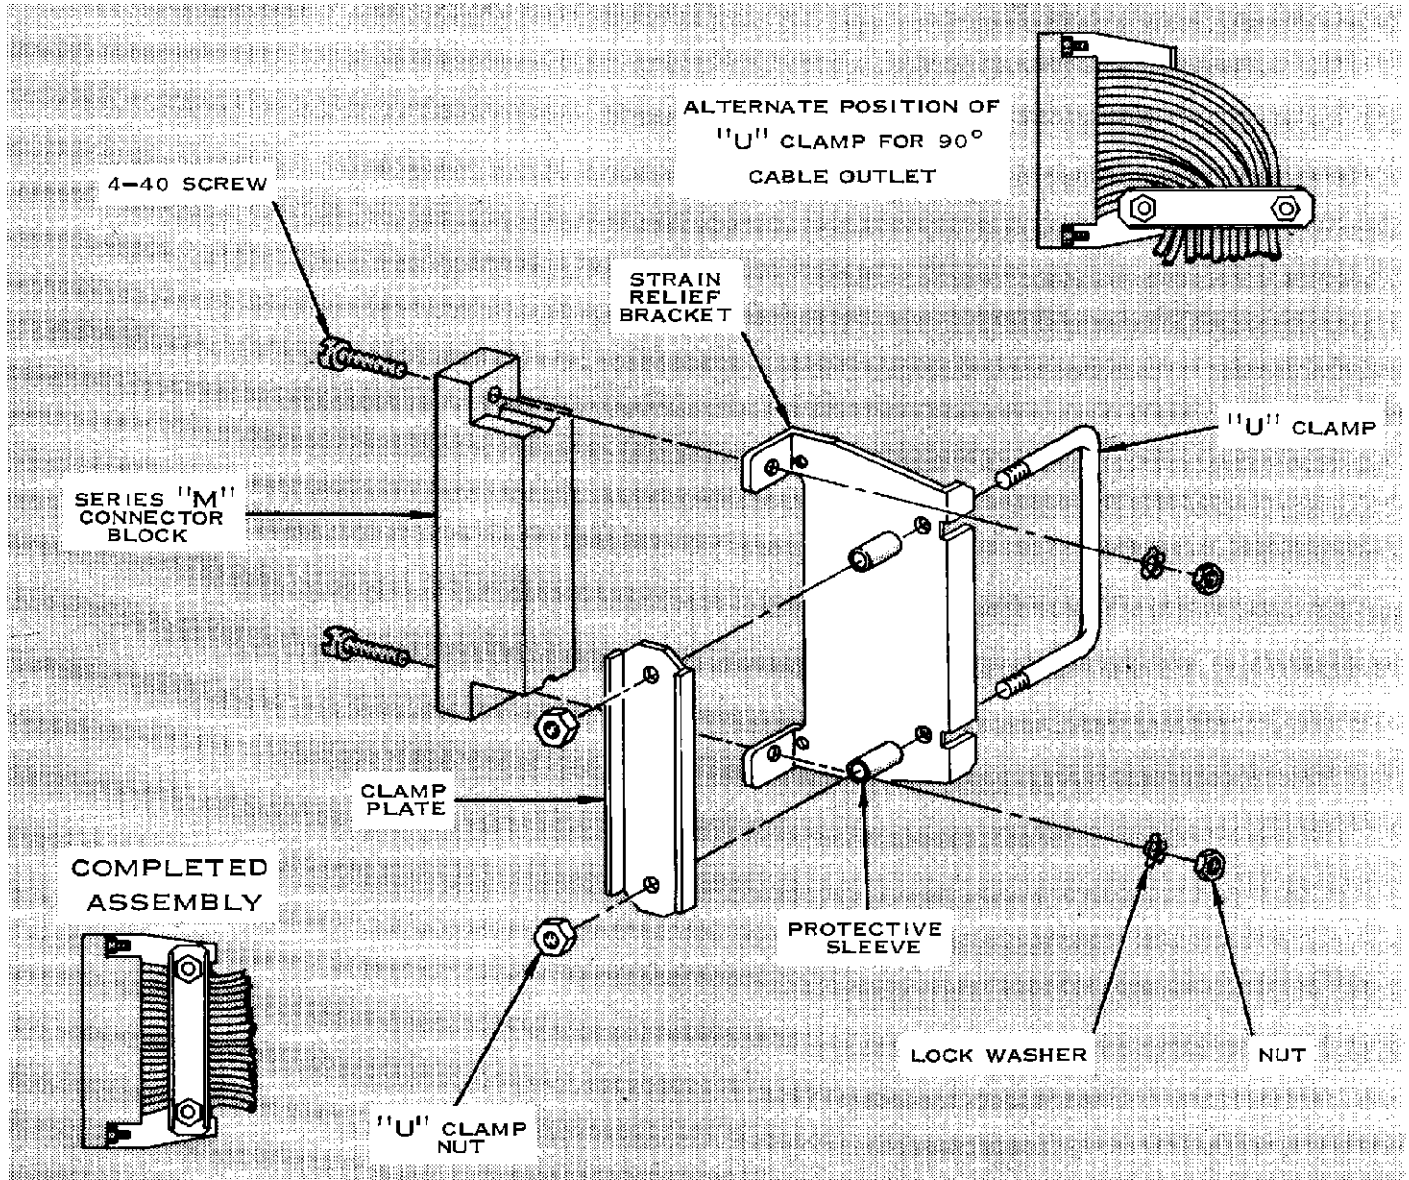


FIG. 1 ASSEMBLY INSTRUCTIONS

1. Select proper Strain Relief Clamp from chart in Figure 2.
2. Attach Strain Relief Bracket to Connector Block using two #4-40 Screws with Nuts and Lock Washers or A-MP Center Guide Pins.

NOTE: See AMP Instruction Sheet No. 7054 for selection and use of A-MP Guide Pins and Sockets.

3. Bundle Cable to pass thru "U" Clamp.
4. Assemble "U" Clamp, Protective Sleeves, Clamp Plate and "U" Clamp Nuts to Bracket. Do not tighten Nuts.
5. Allow a slight amount of slack in Wires between Clamp and Connector Block.
6. Tighten "U" Clamp Nuts.

*Trademark of AMP, Incorporated

STRAIN RELIEF ASSEMBLY NO.	FOR USE ON
201765 - □	21 POSITION SERIES "M" CONNECTOR
201766 - □	41 POSITION SERIES "M" CONNECTOR

FIG. 2

© Copyright 1963, 1964 by AMP Incorporated. All international rights reserved. A-MP U.S.A. and foreign. A-MP products covered by U.S. and foreign patents and/or patents pending.