

Fig. 1

1. INTRODUCTION

This instruction sheet covers the use of AMP Polarizing End Shrouds which are used with AMPMODU MOD II uninsulated contact posts. Read these instructions thoroughly before installing any end shrouds.

2. DESCRIPTION (Figure 1)


The shrouds are designed for .025-in. square MOD II posts and ACTION PIN ★ posts and are designed to provide partial post protection and polarization for various receptacles with 12 or more positions on double-row applications and with six or more positions for single-row applications.

Shrouds are designed to fit over the shoulder of the MOD II post so that the post can be used for mating applications with AMPMODU MOD IV connectors, AMP-LATCH ★ connectors, and Flexible Flat Cable (FFC) connectors. See Figure 2.

Shrouds are supplied in four double-row styles and one single-row style. See Figure 2. Each double-row shroud fits over six posts, and therefore, can be used with receptacles of 12 or more positions. Single-row shrouds are used with connectors of six or more positions.

3. INSTALLATION

The shrouds are supplied in pairs and are designed to snap or break apart from each other. After separating the shrouds, install them on the contact posts as follows:

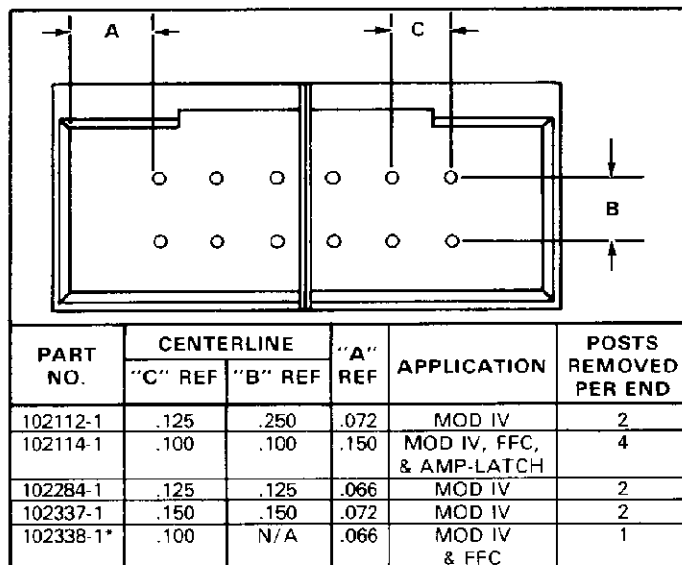

*SINGLE-ROW SHROUD.

Fig. 2

1. Remove the necessary number of posts at each end of the row or rows of contact posts to allow clearance for the shrouds. See chart in Figure 2 for the correct number of posts to be removed. If the shrouds fit at the end of the row of posts, no posts need to be removed. See Figure 1.
2. Align the end shrouds over the contact posts according to the number of positions required.
3. Push each end shroud over the contact posts as far as possible.

Copyright 1979 by AMP Incorporated, Harrisburg, Pa. All International Rights Reserved. AMP Incorporated products covered by U.S. and foreign patents and/or patents pending.